## ENTERPRISE SETTING UP GUIDE ADDENDUM

Page 10	Section 'Connecting the Cassette Recorder'. Delete first paragraph. Should read:
	"There are two identical cassette leads supplied with the Enterprise.  Take one of these and insert the larger plug into the socket marked 'IN' at the rear of the computer. Plug the opposite end of the lead into the socket marked 'EAR' on the cassette player. Refer to your cassette recorder instructions for the position of this socket, it may be called 'SAVE' or 'SPKR' instead of 'EAR'. Insert the smaller plug into the socket marked 'REM2' on the rear of the computer, and the opposite end into the small 'REMOTE' socket on the cassette recorder. This is normally close to the 'EAR' socket mentioned earlier. If your cassette recorder does not have a 'REMOTE' facility don't worry. You can still use it with your Enterprise although you will have to use its 'PAUSE' or 'STOP' buttons more often. The other cassette lead supplied with the computer will be used when you SAVE programs. You don't need to worry about connecting it now.'
Page 11	Section 'Loading the Demonstration Cassette'. Last sentence, paragraph 1, should read:  'Hold down the SHIFT key and while doing so, press the key marked
	FUNCTION 1 (REMOTE 2) to release this.
Page 11	Section 'Loading the Demonstration Cassette'. Paragraph 3, line 3, first 2 words should read: "LOADING INTRO".
Page 11	Section 'Loading the Demonstration Cassette'. Insert a new paragraph, after paragraph at the end of the section:  'If you have problems loading the tape, turn to the section on 'Using a Cassette Recorder', on page 14.'
Page 11	Section heading 'Demo', should read 'Intro'. Line 1 should read: 'Intro is the name of the first demonstration program'
Page 14	Section 'Problems with Loading'. Insert the following text between paragraph 2 and paragraph 3:  'If the message:  *** Cassette CRC error appears, try adjusting the volume level on your cassette slightly before trying again.
	If a program is already in the computer, pressing FUNCTION 1 will run this program, not load the next one from the tape. To load a new program you can type LOAD" " or RUN" " followed by a press of the ENTER key. Alternatively, typing NEW and pressing ENTER will delete the current program. FUNCTION 1 can now be used to load and run the next program as before."
Page 14	Section 'Problems with Loading'. Insert the following text at the end of the section:  'The Enterprise is generally compatible with the majority of cassette recorders. It may be that the signal from your recorder is unsuitable, so try another recorder before suspecting a problem with the computer. Cassette recorder heads should be properly adjusted and should be cleaned regularly. The relays controlling the REM1 and REM2 sockets are designed to be used with recorders having low voltage, low current motors. They are NOT suitable for heavy duty recorders or portable stereo systems.'