

15.2.85

APPLICATION NOTE NO. 2

31-37 Hoxton Street  
London N1 6NJ  
Telephone 01-739 4282  
Telex 22717 ENTER G

CASSETTE SAVING INSTRUCTIONS

- 1) Connect grey REM plug to REM socket on cassette recorder (if one is fitted), connect other end to REM2 socket on the computer.
- 2) Connect black plug to OUT socket on computer and other end to MIC, SAVE, or IN socket on cassette recorder (check your recorder manual if you have difficulty).
- 3) Put a blank tape into the recorder and wind past the "leader".
- 4) Press PLAY and RECORD buttons on the recorder and make sure that the PAUSE button (if fitted) is not depressed.
- 5) Type SAVE "FILENAME" [ENTER]  
on the computer where FILENAME is the name of your program.
- 6) The tape should start turning and a noise will be heard from the speaker. The message SAVING FILENAME should appear on the top of the screen.
- 7) When the program has been saved, the 'OK' prompt will appear on the screen and the saving message will disappear from the top of the screen.

TO VERIFY THAT A PROGRAM HAS BEEN SAVED CORRECTLY

- 8) Connect the black plug on the other cassette lead to the IN socket on the computer and the other end to the EAR, LOAD, or OUT socket on the recorder (see your recorder manual for details).
- 9) Wind the tape back to just before the point at which you started saving.
- 10) Press PLAY on the tape recorder (be careful, pressing RECORD as well will wipe out your program).
- 11) Type VERIFY "FILENAME" [ENTER]  
The tape should start turning and the messages SEARCHING and then LOADING FILENAME should appear. If the program verifies correctly then the 'OK' prompt will appear and the messages will disappear from the top of the screen.

It may be necessary to adjust the volume level on your tape recorder (see the 'Setting Up Guide' for details). Repeat the above once you have set the volume correctly.